

# Procedure for Testing OWL Optical Power Meters For Proper Operation

ZOOM 2 Series

Using WaveSource Multimode Light Sources



**Optical Wavelength Laboratories**

# Testing ZOOM 2 Series Optical Power Meters For Proper Operation

## USING OWL WAVESOURCE SERIES MULTIMODE SOURCES

### LIGHT SOURCE MODEL NUMBERS:

WS-MDxx  
WS-MDVxx  
WS-MDSDxx


### Testing ZOOM 2 Series Optical Power Meters for Proper Operation

#### USING A WAVESOURCE MULTIMODE LIGHT SOURCE

**NOTE:** it is recommended to thoroughly clean and inspect all patch cord connectors before making any connection.

#### STEP 1 - Connect ZOOM 2 and WaveSource

Connect the ZOOM 2 and WaveSource together with an orange multimode patch cable as shown below.

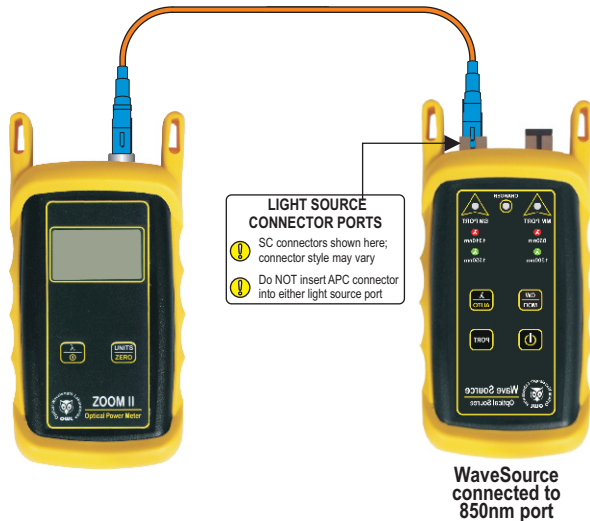

#### STEP 2 - Power ON the ZOOM 2

Press **ON/OFF** to power on the ZOOM 2.

After a few seconds, the ZOOM 2 display should read 'LO', and will appear similar to the diagram shown at right.

**NOTE:** the wavelength and measurement units may be different from the display at right.



#### STEP 3 - Set the ZOOM 2 to 'dBm'

Press **UNITS ZERO** on the ZOOM 2 until the measurement units read 'dBm' as shown at right. You may need to press the button several times.



#### STEP 4 - Set ZOOM 2 to 850nm


Press **AUTO** on the ZOOM 2 until the wavelength display shows '850nm' as shown at right. You may need to press the button several times.



#### STEP 5 - Power ON the WaveSource


Press **POWER** to power on the WaveSource.

The 850nm indicator LED should now be lit as shown at right.

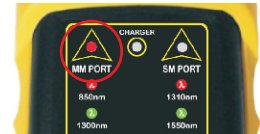

#### STEP 6 - Measure optical power

The power reading that appears on the ZOOM 2 display will depend upon cable type. Consult the table below for a list of acceptable power readings.

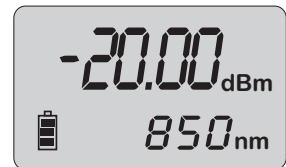

Core Size	Acceptable Power Level	Replace at
62.5/125 μM	-19.0 to -21.0 dBm	-21.00 dBm
50/125 μM	-22.0 to -24.0 dBm	-24.00 dBm

**NOTE:** the following steps are only required if the optical power reading on the ZOOM 2 is too low.

#### STEP 7 - Replace the patch cable

The easiest way to troubleshoot low power levels is to try another patch cable. Over time, patch cables can wear out or become damaged the more they are used for optical loss testing. Replacing the patch cable usually fixes the problem.

#### STEP 8 - Clean patch cables and optical ports

If the problem still exists after patch cable replacement, there may be some debris, such as dust, dirt, or finger oil, that has collected on the connector endface or in the equipment optical ports.

Thoroughly clean and inspect the optical ports of the ZOOM 2 and the WaveSource, as well as the fiber connector endfaces, according to the brochures that have been included with this kit. Several cleaning cycles may be required.

If the power level is still too low, even after a thorough cleaning and inspection and patch cable replacement, contact OWL technical support at 262-473-0643 for more information.